

AP781951_Brenner Speaker/Brenner hangszóró


■■ ANTONIO MIRO ■■

AP781951 Speaker Brenner User Manual (Eng)



It is recommended to read this user manual carefully and keep it for future reference.

Product Overview:

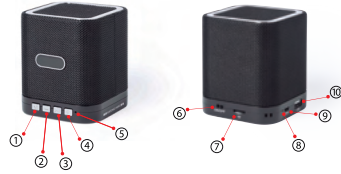

1. **M**: Mode
2. -: Previous track/Volume down/Change the FM channel
3. **▶||**: Play/Pause/Pick up/Hang up/Reject/Redial/ Scan the FM channels
4. +: Next track/Volume up/Change the FM channel
5. Microphone
6. ON/OFF
7. Micro SD Card Slot
8. LED indicator
9. Micro USB Port
10. USB Port

Specifications:

- Bluetooth version 4.1
- Charge voltage: 5V
- Lithium battery 500mAh, 3.7V
- Frequency: 280Hz – 16KHz.
- Working time: Up to 3 hours.
- Working distance: Up to 10M
- Impedance: 4 ohms
- Power: 3W
- Distortion: less than 0.5%
- SNR: 95dB
- Support Micro SD Card up to 32GB

Operation:

Switch the ON/OFF button to "ON" to power on the device, to use the following functions:

Note: Once finished using, switch the button to "OFF" to turn off the device

Playing music via Bluetooth:

When the speaker is powered on, the blue LED light will flash quickly, which indicates that the device is ready to be paired.

From the Bluetooth menu of your device, search for new devices and select "7343". Once paired, the blue LED light of the receiver will remain fixed.

From this moment, you can control the music from your mobile device, or from the speaker.

- Short press **▶||** to play/pause the music.
- Short press + and - to change the song and long press to adjust the volume

Note: Short press **M** to change mode

FM Mode:

Short press **M** until you reach FM mode

Insert the micro USB cable into the micro USB port to work as an antenna. Short press **▶||** to scan the FM channels. Once finished, short press + or - to change the channel, and long press to adjust the volume.

Playing music by Micro SD Card / USB Flash drive:

Insert the SD card / USB flash drive into the appropriate slot and the music will start playing automatically.

From this moment, you can control the music from the speaker.

Note: It is not necessary that the device is connected via Bluetooth. If it is previously, the speaker will switch to SD Card / USB mode automatically. Short press **M** to change mode.

Audio Input (Line in):

Insert the micro USB cable into the micro USB port, and insert the 3.5mm jack into your mp3/mp4 player/mobile phone or other compatible device to play the music.

Note: When connecting the cable, the device does not change mode automatically. Short press **M** to switch to AUX Mode.

Hands-free:

When the device is connected via Bluetooth, you can use the hands-free function.

- Short press **▶||** to pick up/hang up a call and long press to reject the incoming call.
- Short Press **▶||** twice consecutively to redial the last outgoing phone number.

Note: During the call, you can adjust the volume of the call by keeping pressed + or -.

Charging:

Insert the Micro USB connection into the Micro USB port on your device and connect the other end of the cable to your PC or AC/DC adaptor to charge the speaker. During the charging process, a red indicator light will remain on. When the charging process has finished, the indicator light will turn off. At the end of charging, do not forget to disconnect the cable.

Troubleshooting:

Fault	Solution
Unable to pair with other devices.	1. Check whether the speaker is still in the process of search or switch it off and on again. 2. There are too many Bluetooth devices in the proximity that cause difficulty in connection. 3. Turn off other Bluetooth devices. 3. Make sure your device is in "Pairing Mode".
The sound is low or distorted.	4. Check the Bluetooth device volume and then adjust it to an appropriate level. 5. Recharge the battery.
Occasionally the music stops.	6. Check whether the speaker effective transmission range is exceeded or if there is an obstacle between the speaker and other Bluetooth devices.
The LED indicator does not light up.	7. The battery level is low, recharge the device. 8. Switch the speaker off and on again.

Warnings:

1. Do not expose this product to rain or damp conditions.
2. Prevent this item from falling as it could cause serious damage.
3. Do not dismantle, repair or modify this product by yourself, contact an authorized specialist.
4. In order to avoid any risk, do not dispose of this product inappropriately as there is a built-in Lithium battery.
5. Clean the speaker with a dry cloth.
6. Do not place this item near sources of heat or expose to direct sunlight.
7. Do not insert any metal objects into this device as there is a risk of causing a short circuit in the unit.
8. Keep out of reach of children.



MADE IN PRC

This symbol both in the product and its user manual indicates that at the end of the devices electrical life, it should be recycled separately from your household waste.
There are adequate means to dispose of this material for proper recycling. For more information, contact your local authorities.

Distributor: Cool Collection, 1476, Budapest, POB:176, Hungary
Registration nr.: 01-09-276783, Made in China

■■ ANTONIO MIRO ■■

AP781951_Brenner hangszóró



Javasoljuk, hogy alaposan olvassa el a használati útmutatót és őrizze meg későbbi felhasználás céljából.

Termék áttekintés



1. M: mód
2. -Előző zeneszám, Hangerő fel/ Rádió csatorna léptetés
3. Lejátszás/megállítás/Hívás fogadás/elutasítás/Rádió csatorna
4. +:Következő zeneszám/ Hangerő növelés/ Rádió csatornák közötti lépkedés
5. Mikrofon
6. KI/BEkapcsoló gomb
7. Mikro SD kártya olvasó
8. Led kijelző
9. Micro USB csatlakozó
10. USB csatlakozó

Technikai adatok:

- 4.1 Bluetooth
- Töltési feszültség: 5V
- Lítium akkumulátor 500mAh 3.7V
- Frekvencia: 280Hz-16KHz
- Működési időtartam akár 3 óra
- Hatótávolság: akár 10 méter
- Ellenállás: 4 Ohm
- Töltési bemenet:3W
- Torzítás: kevesebb mint 0.5%
- Hangerő: 95dB
- Bővíthető SD kártyával, akár 32 GB-ig

Működés:

Tartsa lenyomva a bekapcsoló gombot a fejhallgató bekapcsolásához.

Megegyezés:Nyomja meg az "OFF" gombot a hangszóró kikapcsolásához.

Zene lejátszása Bluetooth-on keresztül:

Amikor a hangszóró bekapcsol, a kék jelzőfény lassan kialszik. Ezután kéz az eszköz a párosításra.

Az eszköz Bluetooth menüjében keressen új eszközöket és válassza a(z) "7343"-t a párosításhoz. Amint sikeres a csatlakozás, a jelzőfény folyamatosan világítani fog.

Ezután tudja irányítani a zenét a mobil eszközéről vagy a hangszóróról.

-Röviden nyomja a gombot: a zene lejátszás/szüneteltetése.
-Röviden nyomja a + vgy - gombot: Zenék közötti lépkedés, illetve ha hosszan nyomja a gombot a hangerőt tudj szabályozni.

Megjegyzés: A mód választáshoz nyomja meg röviden az M gombot.

FM rádió

Nyomja meg röviden az M betűt a rádió mód választáshoz.

Ezután csatlakoztassa a Mikro USB kábelt a micro USB bemenethez. Nyomja meg röviden a lejátszási gombot a rádió csatorna választáshoz. Amikor végezt, nyomja meg a + vagy - jelet a csatorna választáshoz, vagy hosszan a hangerő szabályozáshoz.

Mikro SD kártya

Amikor behelyezi a USB kártyát a Micro USB olvasóba a fejhallgatóban a zene automatikusan elindul.

Ezután tudja szabályozni a zenét a hangszórón.

Megjegyzés: Ha szükséges csatlakoztassa az eszközt a Bluetooth-hoz. A hangszóró automatikusan csatlakozni fog az SD kártyához/USB módhoz. Nyomja meg röviden az M betűt a mód választáshoz.

Hang bemenet

Dugja be az audiokábelt a 3,5mm-es fejhallgatóba és csatlakoztassa az audiokábel máik végét az MP3/ MP4 lejátszóhoz/ mobilkészülékhez vagy más kompatibilis eszközhöz a zene lejátszásához.

Megjegyzés: Amikor csatlakoztatta a kábelt, az eszköz nem fog automatikusan csatlakozni. Nyomja meg röviden az M betűt a mód választáshoz.

Kéz nélküli irányítás

Amikor az eszköz csatlakozott a Bluetooth-hoz, utána tudja használni ezt a funkciót.

- Nyomja meg röviden a hívás elfogadásához, hosszan pedig az elutasításhoz.
- Nyomja meg kétszer a legutóbbi hívás újratárcsázásához.

Megjegyzés: Hívás közben tudja szabályozni a hangerőt, ha lenyomva tartja a + vagy -

Töltés:

Töltés esetén használja a termékhez mellékelt kábelt. Csatlakoztassa az USB kábelt a számítógéphez / AC adapterhez. Csatlakoztassa a kábel Mikro USB végét a készülékének Mikro USB portjához. A töltés alatt a jelzőfény pirosra vált. Teljesen feltöltött állapotban a jelzőfény kikapcsol. A töltés végén, ne felejtse el eltávolítani a kábelt.

Hibaelhárítás

Hiba	Megoldás
Nem tud csatlakozni más eszközökhöz	1. Ellenőrizze, hogy a fejhallgató még mindig keresi-e a készüléket, vagy kapcsolja ki és újra be az. 2. Problémát okozhat a csatlakozásban, ha több Bluetooth eszköz található a közelében. Kapcsolja ki a többi Bluetooth eszközt. 3. Bizonyosodjon meg arról, hogy az eszköz
A hang halk vagy torz.	4. Ellenőrizze a Bluetooth eszközön a hangerőt, majd állítsa be a kívánt szintre. 5. Töltse fel az akkumulátort.
Időnként a zene megáll	6. Ellenőrizze, hogy túllépte-e a fejhallgató tényleges átviteli tartományát, illetve, hogy van-e akadály a fejhallgató és más Bluetooth-eszközök között.
A LED jelzőfény nem világít	7. Ha a töltöttség alacsony, töltse fel az eszközt. 8. Kapcsolja ki a hangszórót, majd kapcsolja vissza.

Figyelmeztetés:

1. Ne tegye ki a terméket esőnek vagy páris körülményeknek.
2. Akadályozza meg a termék leesését, mivel az komoly kárral járhat.
3. Ne szedje szét, javítsa-vagy módosítsa az eszközt önmagától, keressen fel egy szakembert.
4. A kockázat elkerülése érdekében a kijelölt helyekre dobja ki a terméket, illetve semmiképp se dobja tűzbe, mivel beépített lítium akkumulátor van benne.
5. Száraz törülközővel tisztítsa.
6. Ne tegye hőforrások közelébe és ne tegye ki közvetlen napfénynek a készüléket.
7. Ne helyezzen semmilyen fémtárgyat a készülékbe, mert fennáll annak a veszélye, hogy rövidzárlat keletkezik az egységben.
8. Tartsa távol a terméket gyermekektől.



MADE IN PRC

Ez a szimbólum a termék csomagolásán és a használati útmutatóján jelzi, hogy a készülék élettartama lejártá után a szelektív gyűjtőbe kerüljön elkülönítve a háztartási hulladéktól. Ez a jel gondoskodik az alapanyag megfelelő újrahasznosításáról. További információkért keresse a helyi hatóságot.

Forgalmazó: Cool Collection, 1476, Budapest, Pf:176, Magyarország
Cégjegyzékszám: 01-09-276783, Származási ország: Kína