


FRONT PART

AP722742 Skind Bluetooth Hangszóró Használati útmutató



Kérjük figyelmesen olvassa el a használati utasítást és őrizze meg!

Termék áttekintés:

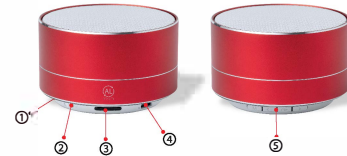

1. Mikrofon
2. ON/OFF gomb
3. Micro SD kártya nyílás
4. Micro USB bemenet
5. Vezérlógombok

Műszaki adatok:

- Bluetooth verzió 5.0
- Töltési feszültség: 5V
- Litium akkumulátor 450mAh 3.7V
- Működési idő: 4-5 óra
- Működési távolság: közel 10 m
- Frekvencia: 280Hz – 16KHz
- Ellenállás: 4 ohm
- Teljesítmény: 3W
- Torzítás: kevesebb, mint 10%
- Hangerő: >65 dB
- Micro SD kártya max 64GB

Működtetés:

A bekapcsoláshoz nyomja meg az ON gombot. Villogó kék fény jelzi, hogy az eszköz készen áll a párosításra.

A kikapcsoláshoz nyomja meg az OFF gombot.

Zenelejátszás Bluetooth-on keresztül:

Az eszköze Bluetooth menüjéből keresen új eszközöket és válassza ki „1997” -ot a párosításhoz. Amint sikeres volt a párosítás, hallani fog egy értesítési hangot és a jelzőfények folyamatosan világítanak.

Zenelejátszás SD kártyán-on keresztül:

Miután beillesztette a micro SD kártyát, a zenelejátszás elindul.

FM Radio:

Csatlakoztassa a Micro USB kábelt a porthoz mint egy antenna. Nyomja meg a C/> gombot és az eszköz automatikusan keresni kezdi a csatormákat. Nyomja meg röviden a <> gombot a csatornaváltáshoz.

Töltés:

Használja a mellékelt kábelt a töltéshez. Töltődés alatt a vörös jelzőfény égvé marad. Amikor a hangszóró teljesen feltöltődött, a jelzőfény kikapcsol.

Vezérlő gombok:

>	<ul style="list-style-type: none"> • Nyomja meg röviden a gombot a következő dálhoz. • Nyomja meg hosszan a gombot a hangerő növeléséhez. (A maximális hangerő elérésekor értesítési hangot fog hallani)
<	<ul style="list-style-type: none"> • Nyomja meg röviden a gombot az előző dálhoz. • Nyomja meg hosszan a gombot a hangerő csökkentéséhez.
C/>	<ul style="list-style-type: none"> • Nyomja meg röviden a gombot a hívás fogadásához/ befogadásához. Nyomja meg röviden a gombot a zene lejátszásához/szüneteltetéséhez. Nyomja meg kétszer a gombot a bejövő hívás elutasításához. • Nyomja meg kétszer a gombot az utolsó telefonszám újratárcsázásához.
M	<ul style="list-style-type: none"> • Röviden nyomja meg a funkció megváltoztatásához (Bluetooth / FM rádió / Micro SD kártya).

Hibaelhárítás:

Hiba	Megoldás
Az eszközök párosítása sikertelen.	<ol style="list-style-type: none"> 1. Ellenőrizze, hogy a hangszóró be van-e kapcsolva a keresési folyamatban, vagy ki van-e kapcsolva. 2. Túl sok Bluetooth-eszköz van a közelben, ami csatlakozási nehézséget okoz. Kapcsolja ki a többi Bluetooth-eszközt.
A hang halk vagy torz.	<ol style="list-style-type: none"> 4. Ellenőrizze a Bluetooth-eszköz volume-ot, majd állítsa be a megfelelő szintre. 5. Töltse fel az akkumulátort.
Időnként elhallgat a zene.	<ol style="list-style-type: none"> 6. Ellenőrizze, hogy a hangszóró hatékony átviteli tartományba lép-e, vagy van-e akadály a hangszóró és más Bluetooth-eszközök között.

Figyelmeztetések:

1. Ne tegye ki a terméket esőnek vagy páras körülményeknek.
2. Akadályozza meg a termék leesését, mert az komoly kárt okozhat.
3. Ne szedje szét, javítsa -vagy módosítsa az eszközt önmagától, keressen fel egy szakembert.
4. A kockázatok elkerülése érdekében ne dobja ki a terméket helytelen módon, mert beépített Litium akkumulátort tartalmaz.
5. Tisztítsa a hangszórót száraz törlőruhával.
6. Ne helyezze az eszközt hőforrás közelébe, - illetve ne tegye ki direkt napfénynek.
7. Ne helyezzen semmilyen fém tárgyat az eszközbe, mert az rövidzárlatot okozhat.
8. Gyermekektől távol tartandó.

Ez a szimbólum a termék csomagolásán és a használati útmutatóján jelzi, hogy a készülék élettartama lejártá után a szelektív gyűjtőbe kerüljön elkülönítve a háztartási hulladéktól. Ez a jel gondoskodik az alapanyag megfelelő újrahasznosításáról.

RoHS
 Forgalmazó: Cool Collection, 1476 Budapest, PE176, Magyarország
 Cégjegyzékszám: 01-09-276783
 Származási ország: Kína


BACK PART

AP722742 Speaker Skind User manual



It is recommended to read this user manual carefully and keep it for future reference.

Product Overview:

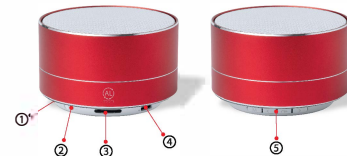

1. Microphone
2. ON/OFF button
3. Micro SD Card Slot
4. Micro USB Input
5. Controls

Specifications:

- Bluetooth version 5.0
- Charging voltage: 5V
- Lithium battery 450mAh 3.7V Working Time: 4-5h
- Operating distance: up to 10 meters
- Frequency: 280Hz-16KHz
- Impedance: 4Ohms
- Power output: 3W
- THD: less than 10%
- SNR: >65dB
- Micro SD card: up to 64GB

Operation:

Switch the power button to ON position to power on the speaker. The blue light indicator will start to blink showing that it's ready to be paired.

Switch the power button to the OFF position to power off the speaker.

Playing Music via Bluetooth:

From the Bluetooth menu of your device, search for new devices and select "1997" to pair. Once they are paired successfully, you will hear a notification sound and the indicator light will keep fixed.

Playing Music via Micro SD Card:

When you insert a micro SD card into the micro SD card, the music will automatically start playing.

FM Radio:

Connect the Micro USB cable into the Micro USB port to work as an antenna. Press for a second C/> and the speaker will automatically search for radio channels. Short press <> to change the channel.

Charging:

Connect the charger to an appropriate power source using the supplied cable.

During charging, the red indicator light will stay on. When the speaker is fully charged the indicator light will turn off.

Controls:

>	<ul style="list-style-type: none"> • Short-press the button to next song. • Long-press the button to increase the volume. (When max volume is reached you will hear a notification sound)
<	<ul style="list-style-type: none"> • Short-press the button to previous song. • Long-press the button to decrease the volume.
C/>	<ul style="list-style-type: none"> • Short-press the button to answer/end a call. • Short-press the button to play/pause the music. • Press twice the button to reject an incoming call. • Press twice the button to redial the last phone number.
M	<ul style="list-style-type: none"> • Short press to change the function (Bluetooth / FM Radio / Micro SD card).

Troubleshooting:

Fault	Solution
Unable to pair with other devices.	<ol style="list-style-type: none"> 1. Check whether the speaker is still in the process of search or switch it off and on again. 2. There are too many Bluetooth devices in the proximity that cause difficulty in connection. Turn off other Bluetooth devices. 3. Make sure your device is in "Pairing Mode".
The sound is low or distorted.	<ol style="list-style-type: none"> 4. Check the Bluetooth device volume and then adjust it to an appropriate level. 5. Recharge the battery
Occasionally the music stops.	<ol style="list-style-type: none"> 6. Check whether the speaker effective transmission range is exceeded or if there is an obstacle between the speaker and other Bluetooth devices.

Warnings:

1. Do not expose this product to rain or damp conditions.
2. Prevent this item from falling as it could cause serious damage.
3. Do not dismantle, repair or modify this product by yourself, contact an authorized specialist.
4. In order to avoid any risk, do not dispose of this product inappropriately as there is a built-in Lithium battery.
5. Clean the speaker with a dry cloth.
6. Do not place this item near sources of heat or expose to direct sunlight.
7. Do not insert any metal objects into this device as there is a risk of causing a short circuit in the unit.
8. Keep out of reach of children.

This symbol both in the product and its user manual indicates that at the end of the device's electrical life, it should be recycled separately from your household waste. There are adequate means to dispose of this material for proper recycling. For more information, contact your local authorities.

RoHS
 Distributor: Cool Collection, 1476 Budapest, PE176, Hungary
 Company registration number: 01-09-276783
 Made in China