


# AP781874-25 Viancos bluetooth speaker


## BACK PART

**AP781874-25 Viancos bluetooth speaker User Manual (ENG)**



It is recommended to read this user manual carefully and keep it for future reference.

**Product Overview:**

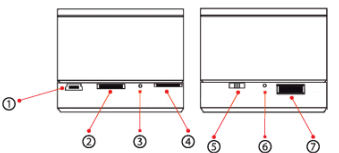

1 Micro USB Port  
2. Control button  
• ► **I/M**: Play / Pause / Pick up / Hang up / Reject / Redial / Mode  
• ◀ ◀ ▶ ▶ ▶ /+ : Volume up and down / Previous and next track / Change the FM channel  
3. Microphone  
4. Micro SD Card Slot  
5. ON/OFF  
6. LED indicator  
7. USB Port

Note: You can see the controls on the bottom of the speaker

**Specifications:**

- Bluetooth version 4.1
- Charge voltage: 5V
- Lithium battery 300mAh, 3.7V
- Frequency: 280Hz – 16KHz
- Working time: Up to 2 hours.
- Working distance: Up to 10M
- Impedance: 4 ohms
- Power: 3W
- Distortion: less than 0.5%
- SNR: 95 dB
- Support Micro SD Card up to 32GB
- 1 LED

**Operation**

Switch the ON/OFF button to "ON" to power on the device, to use the following functions:

Note: Once finished using, switch the button to "OFF" to turn off the device.

**Playing music via Bluetooth:**

When the speaker is powered on, the blue LED light will flash quickly, which indicates that the device is ready to be paired.

From the Bluetooth menu of your device, search for new devices and select "AP781874". Once paired, the blue LED light of the receiver will remain fixed.

From this moment, you can control the music from your mobile device, or from the receiver.

- Short press ► **I/M** to play/pause the music.
- Slide and release the control button - /◀◀▶▶/+- to change the song, and hold it to the side to adjust the volume.

Note: Long press ► **I/M** to change mode.

**Hands-free:**

When the device is connected via Bluetooth, you can use the hands-free function.

- Short press ► **I/M** to pick up/hang up a call and long press to reject the incoming call.
- Press ► **I/M** twice consecutively to redial the last outgoing phone number.

Note: During the call, you can adjust the volume of the call by keeping the control button to the left or right.

**FM Mode:**

Press and hold ► **I/M** until you reach FM mode.

Insert the micro USB cable into the micro USB port to work as an antenna. Short press ► **I/M** to scan the FM channels. Once finished, Slide and release the control button on -/◀◀▶▶/+- to change the channel, and hold it to the side to adjust the volume.

**Audio Input (Line in):**

Insert the micro USB cable into the micro USB port and insert the 3.5mm jack into your mp3/mp4 player/ mobile phone or other compatible device to play the music.

Note: When connecting the cable, the device does not change mode automatically. Long press ► **I/M** to switch to AUX Mode.

**Shutter:**

In Bluetooth mode, connect the camera of your mobile device and slide -/◀◀▶▶/+- button twice consecutively to take the pictures.

**Playing music by Micro SD Card / USB Flash drive:**

Insert the card / USB flash drive into the appropriate slot and the music will start playing automatically.

From this moment, you can control the music from the speaker.

Note: It is not necessary that the devices connected via Bluetooth. If it is previously, the speaker will switch to SD Card / USB mode automatically. Long press, ► **I/M** to change mode.

**Charging:**

Insert the Micro USB connection into the Micro USB port on your device and connect the other end of the cable to your PC or AC/DC adaptor to charge the speaker. During the charging process, a red indicator light will remain on.

At the end of charging, do not forget to disconnect the cable.


Note: The charging time cannot exceed 8 hours.


**Trouble shooting:**

Fault	Solution
Unable to pair with other device.	1. Check whether the speaker is still in the process of search or switch it off and on again. 2. There are too many Bluetooth devices in the proximity that cause difficulty in connection. Turn off other Bluetooth devices. 3. Make sure your device is in "Pairing Mode".
The sound is low or distorted.	4. Check the Bluetooth device volume and then adjust it to an appropriate level. 5. Recharge the battery.
Occasionally the music stops.	6. Check whether the speaker effective transmission range is exceeded or if there is an obstacle between the speaker and the Bluetooth devices.
The LED indicator does not light up.	7. The battery level is low, recharge the device. 8. Switch the speaker off and on again.

**Warnings:**

- Do not expose this product to rain or damp conditions.
- Prevent this item from falling as it could cause serious damage.
- Do not dismantle, repair or modify this product by yourself, contact an authorized specialist.
- In order to avoid any risk, do not dispose of this product inappropriately as there is a built-in Lithium battery.
- Clean the speaker with a dry cloth.
- Do not place this item near sources of heat or expose to direct sunlight.
- Do not insert any metal objects in to this device as there is a risk of causing a short circuit in the unit.
- Keep out of reach of children.




 This symbol both in the product and its user manual indicates that at the end of the devices electrical life, it should be recycled separately from your household waste. There are adequate means to dispose of this material for proper recycling. For more information, contact your local authorities.

Distributor: Cool Collection, 1476 Budapest, POB:176. Hungary  
Registration nr.: 01-09-276783  
Made in China

# AP781874-25 Viancos bluetooth hangszóró


## FRONT PART

**AP781874-25 Viancos bluetooth hangszóró Használati útmutató (HUN)**



Kérjük figyelmesen olvassa el a használati utasítást és őrizze meg!

**Termék áttekintés:**

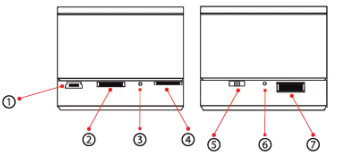

1. Micro USB port  
2. Vezérlő gomb:  
• ► **I/M**: Lejátszás / Szünet / Hívásfogadás / Hívásbefejezése / Híváselutasítás // Újra tárcsázás / Üzem mód  
• -/◀◀▶▶/+-: hangerő fel – és le / Előző és következő zeneszám / FM csatorna váltás  
3. Mikrofon  
4. Micro SD kártya nyílás  
5. BE/KI  
6. LED jelzőfény  
7. USB Port

Megjegyzés: A vezérlőgombok a hangszóró alján láthatók.

**Műszaki adatok:**

- Bluetooth verzió 4.1
- Töltési feszültség: 5V
- Lítium akkumulátor 300mAh, 3.7V
- Frekvencia: 280Hz – 16KHz
- Működési idő: közel 2 óra.
- Működési távolság: közel 10m
- Ellenállás: 4 ohms
- Teljesítmény: 3W
- Torzítás: kevesebb mint 0.5%
- SNR: 95 dB
- Támogatja a Micro SD kártyát 32 GB-ig
- 1 LED

**Működtetés**

Kapcsolja az ON/OFF (BE/KI) gombot az „ON” (BE) állásra az eszköz bekapcsolásához, és az alábbi funkciók használatához:

Megjegyzés: Amint befejezte az eszköz használatát, kapcsolja a gombot „OFF”-ra (KI), az eszköz kikapcsolásához.

**Zenelejátszás Bluetooth-on keresztül:**

Amikor az eszköz bekapcsolt állapotban van, a kék LED fény gyorsan villog, amely azt jelzi, hogy az eszköz párosítható.

Az eszköze Bluetooth menüjében, keressen új eszközöket és válassza ki az "AP781874"-ot. Amint sikerült az eszközöket párosítani, a kék LED fény folyamatosan világít a hangszórón.

Ettől a pillanattól irányíthatja a zenelejátszást a mobil eszközről vagy a hangszóróról.

- Nyomja röviden a ► **I/M** -t a zenelejátszáshoz / szüneteltetéshez.
- Csúsztassa és engedje fel a - /◀◀▶▶/+- gombokat a zeneváltáshoz és tartsa a hangszóró oldalán nyomva a hangerő változtatásához.

Megjegyzés: nyomja hosszan az ► **I/M**-t az üzemmód változtatásához.

**Vezeték nélküli használat:**

Amikor az eszköz Bluetooth-on keresztül van csatlakoztatva, használható a vezeték nélküli funkció.

- Nyomja röviden ► **I/M** -t hívásfogadáshoz/hívásbefejezéshez, és nyomja hosszan híváselutasításhoz.
- Nyomja meg ► **I/M**-t kétszer az utolsó kimenő hívás újratárcsázásához.

Megjegyzés: A hívás alatt állíthatja a hívás hangerejét a vezérlőgomb jobbra-vagy balra tartásával.

**FM üzemmód:**

Tartsa nyomva ► **I/M**-t, amíg az FM módhoz nem ér.

Helyezze a Micro USB kábelt a Micro USB portba, hogy antennaként működjön. Nyomja röviden ► **I/M**-t FM csatornák kereséséhez. Amint ez befejeződött, csúsztassa és engedje fel -/◀◀▶▶/+- gombot a csatorna váltáshoz, és tartsa a hangszóró oldalán a hangerő beállításához.

**Audio bemenet:**

Helyezze a micro USB kábelt a micro USB portba, és helyezze a 3.5 mm jack-dugót az mp3/mp4 lejátszóba/mobiltelefonba vagy egyéb kompatibilis eszközbe, amely zenelejátszásra alkalmas.

Megjegyzés: A kábel csatlakoztatásakor az eszköz nem vált üzemmódot automatikusan. Nyomja meg hosszan ► **I/M** AUX üzemmódra való váltoáshoz.

**Képkészítés:**

Bluetooth üzemmódban csatlakoztassa a mobil eszköze kameráját és csúsztassa a -/◀◀▶▶/+- vagy ►▶/+- gombokat kétszer képkészítéshez.

**Zenelejátszás Micro SD kártyával / Pendrive-al:**

Helyezze az SD kártyát / pendrive-ot a megfelelő nyílásba és a zenelejátszás elindul automatikusan.

Ettől a pillanattól irányíthatja a zenelejátszást a hangszóróról.

Megjegyzés: Nem szükséges, hogy az eszköz bluetooth-on keresztül csatlakozzon. Ha korábban csatlakozott, a hangszóró automatikusan SD kártya / USB módra vált. Nyomja hosszan, ► **I/M**-t az üzemmód megváltoztatásához.

**Töltés:**


Helyezze be a Micro USB csatlakozót a Micro USB portba az eszköznél és csatlakoztassa a kábel másik végét PC-be vagy AC/DC adapterbe a hangszóró töltéséhez.

A töltési folyamat alatt egy piros LED fény világít. A töltés végén ne felejtse el kihúzni a kábelt.

Megjegyzés: a töltési idő nem haladhatja meg a 8 órát.

**Hibaelhárítás:**

Hiba	Megoldás
Nem lehet párosítani más eszközökkel	1. Ellenőrizze, hogy még tart-e a keresés a hangszórónál vagy kapcsol ki-és be újra. 2. Túl sok Bluetooth eszköz van a közelben, amely megnehezíti a kapcsolódást. Kapcsolja ki a többi Bluetooth eszközt. 3. Bizonyosodjon meg róla, hogy az eszköze Párosítási mód-ban van.
A hang halk vagy torz.	4. Ellenőrizze a Bluetooth eszköz hangerejét és utána állítsa azt megfelelő szintre. 5. Töltse újra az akkumulátort.
A zene esetenként megáll.	6. Ellenőrizze, hogy az eszköz hatótávolságon belül van-e, illetve, hogy van-e valamilyen akadály a hangszóró és Bluetooth eszköz között.
A LED fény nem világít	7. Az akkumulátor töltöttségi szintje alacsony, töltse újra az eszközt. 8. Kapcsolja ki a hangszórót be-és ki újra.



Ez a szimbólum a termék csomagolásán és a használati útmutatóban jelzi, hogy a készülék élettartama lejártá után a szelektív gyűjtőbe kerüljön elkülönítve a háztartási hulladéktól. Ez a jel gondoskodik az alapanyag megfelelő újrahasznosításáról. További információkért keresse a helyi hatóságot.

Forgalmazó: Cool Collection, 1476 Budapest, Pf:176. Magyarország  
Cégjegyzékszám: 01-09-276783  
Szármarzási ország: Kína