

AP781865-10 Bolfing Bluetooth speaker


FRONT PART

AP78186-10_ Bolfing Bluetooth speaker User Manual



It is recommended to read this user manual carefully and keep it for future reference.

Product Overview:

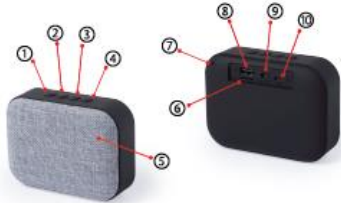

11. M: Mode
12. -: Previous track/Volume down/Change the FM channel
13. +: Next track/Volume up/Change the FM channel
14. ►: Play/Pause/Pick up/Hang up/Reject/Redial/ Scan the FM channels
15. LED indicator
16. Micro SD Card Slot
17. Microphone
18. USB Port
19. ON/OFF
20. Micro USB Port

Specifications:

- Bluetooth version 4.2
- Charge voltage: 5V
- Lithium battery 400mAh, 3.7V
- Frequency: 280Hz - 16KHz
- Working time: Up to 3 hours
- Working distance: Up to 10M
- Impedance: 4 ohms
- Power: 3W
- Distortion: less than 0.5%
- SNR: 85dB
- Support Micro SD Card up to 32GB

Operation:

Switch the ON/OFF button to "ON" to power on the device, to use the following functions:

Note: Once finished using, switch the button to "OFF" to turn off the device

Playing music via Bluetooth:

When the speaker is powered on, the blue LED light will flash quickly, which indicates that the device is ready to be paired.

From the Bluetooth menu of your device, search for new devices and select "AP781865". Once paired, the blue LED light of the speaker will remain fixed.

From this moment, you can control the music from your mobile device, or from the speaker.

- Short press ► to play/pause the music.
- Short press + and - to change the song and long press to adjust the volume

Note: Short press M to change mode

FM Mode:

Short press M until you reach FM mode

Insert the micro USB cable into the micro USB port to work as an antenna. Short press ► to scan the FM channels. Once finished, short press + or – to change the channel, and long press to adjust the volume.

Playing music by Micro SD Card / USB Flash drive:

Insert the SD card / USB flash drive into the appropriate slot and the music will start playing automatically.

From this moment, you can control the music from the speaker.

Note: It is not necessary that the device is connected via Bluetooth. If it is previously, the speaker will switch to SD Card / USB mode automatically. Short press M to change mode.

Audio Input (Line in):

Insert the micro USB cable into the micro USB port, and insert the 3.5mm jack into your mp3/mp4 player/mobile phone or other compatible device to play the music.

Note: When connecting the cable, the device does not change mode automatically. Short press M to switch to AUX Mode.

Hands-free:

When the device is connected via Bluetooth, you can use the hands-free function.

- Short press ► to pick up/hang up a call and long press to reject the incoming call.
- Short press ► twice consecutively to redial the last outgoing phone number.

Note: During the call, you can adjust the volume of the call by keeping pressed + or -.

Charging:

Insert the Micro USB connection into the Micro USB port on your device and connect the other end of the cable to your PC or AC/DC adaptor to charge the speaker. During the charging process, a red indicator light will remain on. When the charging process has finished, the indicator light will turn off. At the end of charging, do not forget to disconnect the cable.

Troubleshooting:

Fault	Solution
Unable to pair with other devices.	1. Check whether the speaker is still in the process of search or switch it off and on again. 2. There are too many Bluetooth devices in the proximity that cause difficulty in connection. Turn off other Bluetooth devices. 3. Make sure your device is in "Pairing Mode".
The sound is low or distorted.	4. Check the Bluetooth device volume and then adjust it to an appropriate level. 5. Recharge the battery.
Occasionally the music stops.	6. Check whether the speaker effective transmission range is exceeded or if there is an obstacle between the speaker and other Bluetooth devices.
The LED indicator does not light up.	7. The battery level is low, recharge the device. 8. Switch the speaker off and on again.

Warnings:

- Do not expose this product to rain or damp conditions.
- Prevent this item from falling as it could cause serious damage.
- Do not dismantle, repair or modify this product by yourself, contact an authorized specialist.
- In order to avoid any risk, do not dispose of this product inappropriately as there is a built-in Lithium battery.
- Clean the speaker with a dry cloth.
- Do not place this item near sources of heat or expose to direct sunlight.
- Do not insert any metal objects in to this device as there is a risk of causing a short circuit in the unit.
- Keep out of reach of children.



This symbol both in the product and its user manual indicates that at the end of the devices electrical life, it should be recycled separately from your household waste. There are adequate means to dispose of this material for proper recycling. For more information, contact your local authorities.

Distributor: Cool Collection, 1476 Budapest, POB:176, Hungary
Registration nr.: 01-09-276783
Made in China

AP781865-10 Bolfing Bluetooth hangszóró


BACK PART

AP781865-10 Bolfing Bluetooth hangszóró Használati útmutató (HUN)



Kérjük figyelmesen olvassa el a használati utasítást és őrizze meg!

Termék áttekintés:

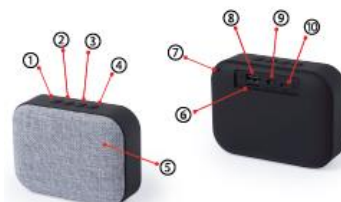

1. M: Mód
2. -: Előző zeneszám / Hangerő le/ FM csatorna-váltás
3. +: Következő zeneszám / Hangerő fel / FM csatorna-váltás
4. ►: Lejátszás / Szünet / Hívásfogadás / Hívásbefejezés / Híváselutasítás / Újra tárcsázás /FM csatornák keresése
5. LED jelzőfény
6. Micro SD kártya nyílás
7. Mikrofon
8. USB port
9. BE/KI
10. Micro USB port

Műszaki adatok:

- Bluetooth verzió 4.2
- Töltési feszültség: 5V
- Lítium akkumulátor 400mAh, 3.7V
- Frekvencia: 280Hz – 16kHz
- Működési idő: közel 3 óra
- Működési távolság: közel 10 m
- Ellenállás: 4 ohm
- Teljesítmény: 3W
- Torzítás: kevesebb, mint 0,5 %
- SNR: 85dB
- Támogatja a Micro SD kártyát 32GB-ig

Működtetés:

Kapcsolja az ON/OFF (BE/KI) gombot „ON” (BE) állásra az eszköz bekapcsolásához, és az alábbi funkciók használatához:

Megjegyzés: használat befejezésekor kapcsolja a gombot „OFF” (KI) állásra az eszköz kikapcsolásához.

Zenelejátszás Bluetooth-on keresztül:

Amikor a hangszóró bekapcsolt állapotban van, kék LED fény világ gyorsan, amely azt jelzi, hogy az eszköz párosítható.

Az eszköze Bluetooth menüjéből, keressen új eszközöket és válassza ki az "AP781865". Amint sikerült az eszközöket párosítani, a kék LED fény folyamatosan világít a hangszórón.

Ettől a pillanattól irányíthatja a zenelejátszást a mobil eszközről vagy a hangszóróról.

- Nyomja a röviden a ►-t a zene elindításához / megállításához
- Nyomja röviden a –, + gombokat a zeneváltáshoz és nyomja hosszan a hangerő változtatásához

Megjegyzés: nyomja röviden az M-t az üzemmód változtatásához.

FM üzemmód:

Nyomja röviden M-t, amíg az FM módhoz nem ér.

Helyezze a Micro USB kábelt a Micro USB portba, hogy antennaként működjön. Nyomja röviden ► -t FM csatornák kereséséhez. Amint ez befejeződött, nyomja röviden + vagy – gombot a csatorna váltáshoz, és nyomja hosszan a hangerő beállításához.

Zenelejátszás Micro SD kártyával / Pendrive-al:

Helyezze az SD kártyát / pendrive-ot a megfelelő nyílásba és a zenelejátszás elindul automatikusan.

Ettől a pillanattól irányíthatja a zenelejátszást a hangszóróról.

Megjegyzés: Nem szükséges, hogy az eszköz bluetooth-on keresztül csatlakozzon. Ha korábban csatlakozott, a hangszóró automatikusan SD kártya / USB módra vált. Nyomja röviden M-t az üzemmód megváltoztatásához.

Audio bemenet:

Helyezze a micro USB kábelt a micro USB portba, és helyezze a 3.5 mm jack-dugót az mp3/mp4 lejátszóba/mobiletelefonba vagy egyéb kompatibilis eszközbe, amely zenelejátszásra alkalmas.

Megjegyzés: A kábel csatlakoztatásakor az eszköz nem vált üzemmódot automatikusan. Nyomja meg röviden M-t AUX üzemmódra való váltsáshoz.

Vezeték nélküli használat:

Amikor az eszköz Bluetooth-on keresztül van csatlakoztatva, használható a vezeték nélküli funkció.

- Nyomja röviden ► -t hívásfogadáshoz, hívásbefejezéshez, és nyomja hosszan híváselutasításhoz.
- Nyomja röviden ► -t kétszer az utolsó kimenő hívás újratárcsázásához

Megjegyzés: A hívás alatt állíthatja a hívás hangerejét a + és – gombok nyomva tartásának segítségével

Töltés:

Helyezze be a Micro USB csatlakozót a Micro USB portba az eszközén és csatlakoztassa a kábel másik végét PC-be vagy AC/DC adapterbe a hangszóró töltéséhez. A töltési folyamat alatt egy piros LED fény világít. Amikor a töltés befejeződött, a fény kialszik. A töltés végén ne felejtse el kihúzni a kábelt.

Hibaelhárítás:

Hiba	Megoldás
Nem lehet párosítani más eszközökkel	1. Ellenőrizze, hogy még tart-e a keresés a hangszórónál vagy kapcsol ki-e és be újra. 2. Túl sok Bluetooth eszköz van a közelben, amely megnehezíti a kapcsolódást. Kapcsolja ki a többi Bluetooth eszközt. 3. Bizonyosodjon meg róla, hogy az eszköze „Párosítási mód”-ban van.
A hang halk, vagy torz.	4. Ellenőrizze a Bluetooth eszköz hangerejét és utána állítsa azt megfelelő szintre. 5. Töltse újra az akkumulátort.
Alkalmanként megáll a zene	6. Ellenőrizze, hogy az eszköz hatótávolságon belül van-e, illetve, hogy van-e valamilyen akadály a hangszóró és Bluetooth eszköz között.
A LED fény nem világít	7. Az akkumulátor töltöttségi szintje alacsony, töltse újra az eszközt. 8. Kapcsolja ki a hangszórót be-és ki újra.

Figyelmeztetés:

- Ne tegye ki a terméket esőnek vagy párás körülményeknek.
- Akadályozza meg a termék leesését, mert az komoly kárt okozhat.
- Ne szedje szét, javítsa-vagy módosítsa az eszközt önmagától, keressen fel egy szakembert.
- A kockázatok elkerülése végett ne szabaduljon meg a terméktől helytelenül, mert beépített Lítium akkumulátort tartalmaz.
- Tisztítsa a hangszórót száraz törülőruhával.
- Ne helyezze az eszközt hőforrás közelébe, - illetve ne tegye ki direkt napfénynek.
- Ne helyezzen semmilyen fém tárgyat az eszközbe, mert az rövidzárlatot okozhat.
- Gyermekektől távol tartandó.



Ez a szimbólum a termék csomagolásán és a használati útmutatón jelzi, hogy a készülék élettartama lejártá után a szelektív gyűjtőbe kerüljön elkülönítve a háztartási hulladéktól. Ez a jel gondoskodik az alacsony megfelelő újrahasznosításáról. További információért keresse a helyi hatóságot

Forgalmazó: Cool Collection, 1476 Budapest, PF:176, Magyarország
Cégjegyzékszám: 01-09-276783
Számzási ország: Kína